

FestiveLights™
For business

4M CONE TREE

INSTRUCTIONS MANUAL

VER: 01-2022



Contents

Disclaimer: 1

Required Tools 2

Specification 2

Maintenance and Storage. 2

Listed Equipment 2

Size 3

Frame Assembly 4

Disclaimer:

Please read the full instruction manual before you start working on the tree.

- Assembly must be carried out by an authorised and trained person in accordance with all necessary H&S regulations.
- Festive Lights Ltd are not liable for any damage caused during assembly, by incorrect assembly or by vandalism, extreme weather and any other external factors.
- Performing any constructional modifications without the agreement from the manufacturer is strictly prohibited.

Required Tools

- Spanner or deep socket NO13 (M8)
- Access equipment

 
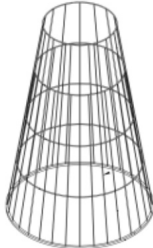 

 
Specification

Weight:	92kg (top 27kg + bottom 65kg)
Size[DxWxH]:	1320 x 1320 x 4000mm
Packiging size supplied on the pallet [DxWxH]:	1x 1320x1320x2100mm 1x 1200x1000x2100mm
Recomended balast:	350kg

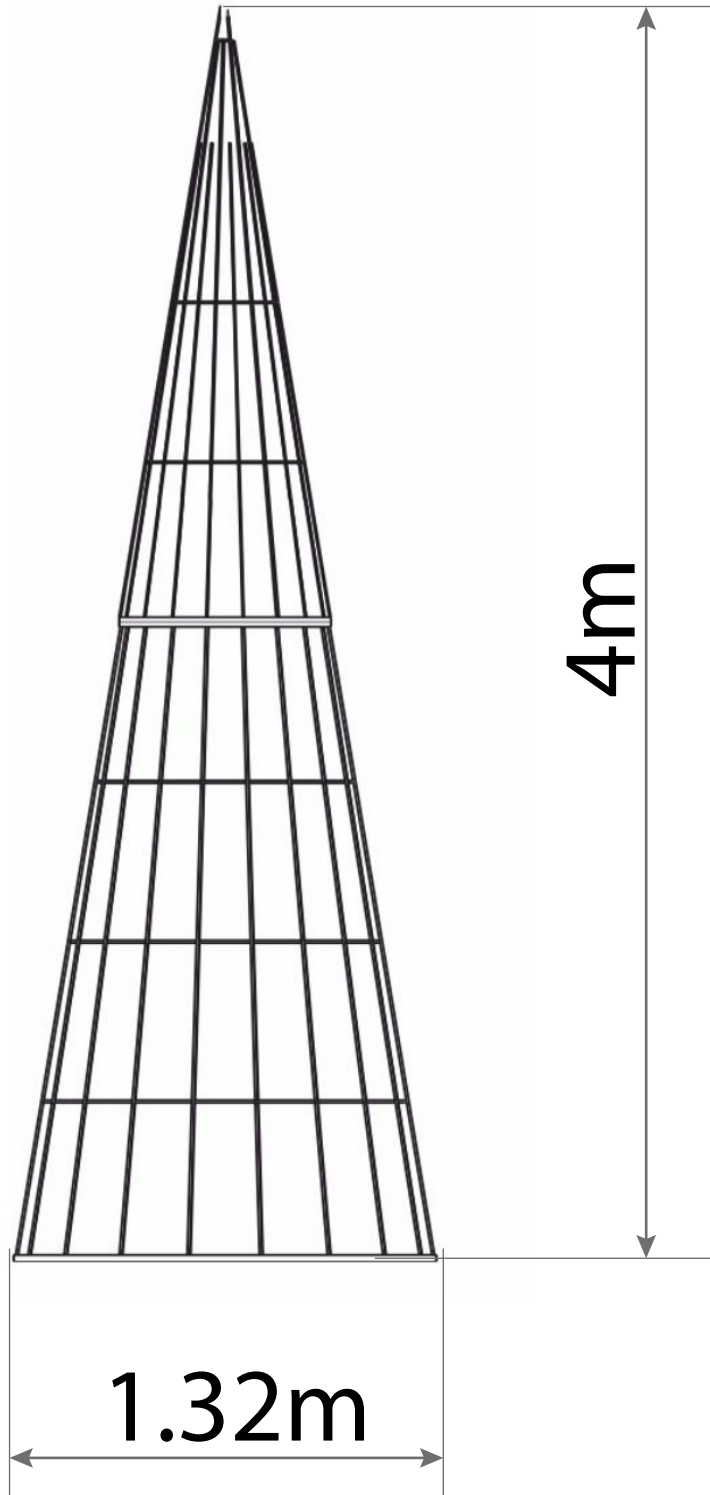 
Maintenance and Storage

- Store your tree in a cool, dry place.
- Maintenance should be carried out by a competent and trained person before each season.

Listed Equipment

Name	Description	Picture	NO
L1	Top tree frame, 2m height		1
L2	Bottom tree frame with the door for access, 2m height		1
TA	Clamps		3
SD	Ballast frame		2
Manual	Instruction for assembly and connections		1

Size



Frame Assembly

- The terrain or mounting surface must be level. Do not install on a slope.
- The ground must be firm and capable to sustain the weight of the installation.
- Use the ballast frame as indicated on schematic below with minimum of 350kg weight.
- Test the stability after the whole contrustruction is assembled.

