

Thank you for purchasing this battery-operated product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

Please Note

- This battery-operated item is designed for indoor use only.
- Uses non replaceable LEDs (light emitting diodes), which last longer than traditional incandescent (or filament) bulbs.
- This product contains glass, please handle with extreme care.

Instructions for use

- Carefully remove the product from the package
- Open the battery box on each tea light by twisting the base in an anti-clockwise direction.
- Activate each tealight by moving the switch to the ON position.
- Replace the battery cover.
- The remote control will operate all tea lights simultaneously.
- Please ensure each candle is positioned so that the remote control can function correctly.

Changing the Batteries

To change the batteries on the tealights, unscrew the base of each tealight and insert 1 x CR2032 size battery. Ensure the flat face (negative) end of the batteries align with the spring contacts within the battery compartment. To change the battery on the remote control, release the locking mechanism on the base of the remote control and slide the battery tray out to expose the battery. Remove and replace ensuring that the battery is inserted with the correct polarity facing downwards. This is supported by the battery tray having sloping sides to support the shape of the battery

- Use only recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of a different type.
- Batteries are to be inserted with the correct polarity. The supply terminals are not to be short circuited.
- Always remove exhausted batteries from the product.
- Remove batteries if the set is not used for extended periods of time.
- Do not attempt to re-charge non rechargeable batteries.
- Rechargeable batteries are to be removed from the item before recharging. Rechargeable batteries are only to be charged under adult supervision.
- Batteries contain substances that may be harmful to the environment and human health.
- Keep out of reach of children and seek immediate medical help if swallowed.
- Never throw batteries in a fire or attempt to open the outer casing.

Warnings

- This product is a decoration not a toy. Keep out of reach of young children as may contain small parts that could represent a choking hazard.



Complies with (EN62115, EN62471, EMC, RoHS)



This symbol indicates that electrical products should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
Contact your local authority for details of local recycling schemes.

Customer Support



NOMA Customer Services
Leisuregrow Products Ltd, Dewmead Farm,
New Inn Road, Hinxworth, Hertfordshire SG7 5HG



consumerservices@leisuregrow.com



+44 (0)1462 744500

Please retain this information leaflet for future reference.