

33 Bulb Silver Candlebridge

Indoor Use Only

CATALOGUE NO: LI111317

Thank you for purchasing this product. Please examine the product carefully before use for signs of damage, such as broken bulbs. Do not use the product if it appears damaged but to return it to the place of purchase. Also, please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

INSTRUCTIONS FOR USE

- This product consists of secure fit, push-in type bulbs connected in series.
- Ensure all bulbs are firmly pushed into the bulb holders.
- A loose or damaged bulb will break the circuit and the whole chain will not light.
- To prevent overheating, failed bulbs should be replaced immediately by bulbs of the same rated voltage and wattage and of the same kind provided with this product – see 'BULBS' section for details.
- To operate, plug into mains supply, indoors.

HOW TO REPLACE BULBS

- Disconnect the light set from the mains supply.
- Hold the bulb in one hand and gently pull the bulb away from the bulb holder using the bulb removing tool provided. Take care not to crush the bulb.
- Gently push in a new bulb using the tool to secure.
- Re-connect the product to the mains supply.

BULBS

- Bulb Rating – 7.3V 0.53W
- Replacement Bulb Catalogue Number: RBY735

PLUG

- This light set is supplied fitted with a plug protected by a 3 amp fuse. Replace only with a 3 amp fuse.

POWER SUPPLY

- Rated Voltage / Wattage: 230V 50Hz 17.49W

FOR SAFETY'S SAKE

- FOR INDOOR USE ONLY – Never use outdoors or in moist or very humid conditions.
- Do not remove or insert bulbs while the chain is connected to the mains supply.
- Do not completely cover the bulb with decorations and other flammable materials. Ensure adequate airflow around each bulb.
- Do not damage the insulation of cable or bulb holder.
- Do not lay the cable under carpet or where it can be damaged.
- Ensure that cables are fully unwound and sited where they will not become damaged or present a tripping hazard.
- Do not connect this light set electrically to any other light set.
- Do not connect the light set to the mains supply while it is in the packaging.
- Do not allow any plastic part to come into contact with heat or flame.
- Ensure all bulb holders are fitted with a bulb.
- For decorative purposes only. Not suitable for use in play by children.
- Unplug the product when leaving the house, when retiring for the night or if left unattended
- Do not overload wall sockets. Use different sockets around the house to plug in multiple lights to balance the load.
- Please retain this information for future reference.



For replacement parts email: accessories@premierdec.com

Complies with requirements of BS EN 60598



Manufactured & imported by:
PREMIER DECORATIONS LTD
United Kingdom: HA4 0EJ
EU: Inniscarra Co Dublin. D24 EO29