



# Assembly, Use and Safety Instructions for: Pre Lit Artificial Christmas Trees with **easytimer™**

**These instructions are for your safety.  
Please read them thoroughly before use and retain for future reference.**

Thank you for purchasing this pre lit Christmas Tree with easytimer™ and unique 1-2-Tree system. The 1-2-Tree system is the fastest and easiest way to illuminate your tree without the need of unsightly wires and connectors. Simply connect the sections together and your tree is ready to connect to the power supply.

Please read these instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

## **Please note**

- The lighting on this Christmas tree are low voltage and the set is electrically safe for indoor use.
- This tree uses non replaceable LED's (light emitting diodes), which use up to 75% less energy and last longer than traditional incandescent (or filament) bulbs.
- The light set operates from a 31V AC via a 230-240V 50Hz safety isolating transformer.

## **Instructions for use**

No tools required for assembly.

## **Before You Start**

- Decide on an appropriate location for your product.
- Remove all plastic bags and dispose of safely out of the reach of children & animals.
- **Please note, it is recommended that two people assemble this item.**

## **How to assemble the tree and tree stand.**

1. Open the stand to form an "X" shape. Ensure the holes in the stand line up with the holes in the legs.
2. Insert the three bolts & screw in– **do not fully tighten the screws at this stage.**

## **How to assemble the tree**

1. Remove any protective plastic end caps from ends of the tree sections and store in the storage carton.
2. Insert the bottom section of the tree into the stand. **One person needs to hold the tree upright whilst the other person tightens the 3 bolts in the stand to hold the tree firmly in place (if applicable).**
3. Check that the tree is upright and not leaning. If so, undo the screws and repeat the operation.
4. Remove the band that holds the bottom branches together (if applicable). The branches should lower into place. Make sure that all of the branches are lowered completely. Do not use unnecessary force.
5. **Do not connect the easytimer™ transformer to the power supply at this stage.**
6. Place the middle section on top of the bottom section and remove the band that secures the branches (if applicable). Make sure that all of the branches have lowered properly.
7. Place the top section on top of the middle section & remove the band that secures the branches.
8. You are now ready to connect the easytimer™ to the power supply.

## How to operate the easytimer™ transformer

easytimer™



- At the time you want your light set to switch “ON”, press the button for 3 seconds or until the button illuminates green. The set will stay lit for the same 8 hours every day until reset.
- To reset, simply press the button for 3 seconds or until the green lights goes off. The timer is now in the “OFF” mode.

## Warnings

- 1) This product is suitable for **INDOOR USE ONLY**.
- 2) Do not position or place near heaters or any other direct sources of heat or flame.
- 3) Always position your tree and cable and any extension leads so that they will not be a hazard to the elderly, pets and children.
- 4) This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.
- 5) **Caution** – Artificial trees have small parts which may pose a choking hazard if detached from the branches.

## Care and Use

- On a weekly basis. Please check that the tree is still firmly attached and supported by the base. Tighten the thumb screws if required.

## Packing away the tree

When you have finished using, please repack as follows to avoid damage and to ensure that your tree can be used again.

- When disassembling the tree, start from the top and work your way down.
- Dismantle the tree into sections. Dismantle the base – but remember to keep all the components
- Place the tree sections into the box, followed by the base and other components.
- We recommend that you tether or cello tape the box to avoid any lost items.
- Before you place the tree into storage, check that you have not forgotten any components.
- Ensure the storage area is dry; avoid any damp, wet and humid areas.

## Safety Guidelines

1. Do not connect to the power supply while it is in the packing.
2. The external flexible cable or cord of this lighting chain cannot be replaced, if the cord is damaged, the product must be destroyed.
3. Do not connect the chain electrically to another chain.
4. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat
5. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
6. This is an electrical product – not a toy!
7. Do not hang ornaments or other objects from cord, wire, or light string.
8. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
9. Do not cover the power supply with cloth, paper or any material not part of the product when in use.
10. Do not use if there is any damage to the light insulation. Inspect periodically.
11. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the LED's or enclosures, loose connections, or exposed copper wire.

## Customer Support



**NOMA Customer Services**  
**LeisureGrow Products Ltd, Dewmead Farm,**  
**New Inn Road, Hinxworth, Hertfordshire, SG7 5HG**



**consumerservice@leisuregrow.com**



**01462 744500**